


Downlight Spacing Tables

3W Open Area Recessed Downlight (09030V2) Spacing Table				
	Open	ı Area (0.5 lux minim	num)	
Mounting Height (M)	Transverse To Wall (M)	Transverse To Transverse (M)	Axial To Wall (M)	Axial To Axial (M)
2.5	3	7.8	-	-
4	3.6	9	-	-
6	3.6	10.8	-	-
3W Corridor Recessed Downlight (09031V2) Spacing Table				
Escape Route (1 lux across central line)				
Mounting Height (M)	Transverse To Wall (M)	Transverse To Transverse (M)	Axial To Wall (M)	Axial To Axial (M)
2.5	3	7.2	-	-
4	2.4	7.8	-	-



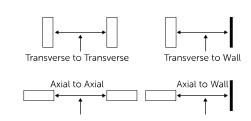

3W Corridor (09126) Spacing Table						
	Escape Ro	oute (1 lux across ce	ntral line)			
Mounting Height (M)	Transverse To Wall (M)	Transverse To Transverse (M)	Axial To Wall (M)	Axial To Axial (M)		
2.5	5.0	18.5	-	-		
4	5.0	21.5	-	-		
6	-	-	-	-		
	3W Open Area (09126) Spacing Table					
Open Area (0.5 lux minimum)						
Mounting Height (M)	Transverse To Wall (M)	Transverse To Transverse (M)	Axial To Wall (M)	Axial To Axial (M)		
2.5	5.0	12	5.0	12		
4	3.0	14	3.0	14		
6	2.0	13	2.0	13		




3W Corridor Recessed Downlight (09075V2) Spacing Table						
	Escape Route (1 lux across central line)					
Mounting Height (M)	Transverse To Wall (M)	Transverse To Transverse (M)	Axial To Wall (M)	Axial To Axial (M)		
2.5	7.2	18	-	-		
4	9	20.4	-	-		
6	7.8	21.6	-	-		
3W Open Area Recessed Downlight (09075V2) Spacing Table						
Open Area (0.5 lux minimum)						
Mounting Height (M)	Transverse To Wall (M)	Transverse To Transverse (M)	Axial To Wall (M)	Axial To Axial (M)		
2.5	4.2	10.8	4.2	10.8		
4	4.2	11.4	4.2	11.4		
6	4.2	12.6	4.2	12.6		





Bulkhead Spacing Tables

3W Bulkhead (09040V2) Spacing Table					
	Escape Ro	oute (1 lux across ce	ntral line)		
Mounting Height (M)	Transverse To Wall (M)	Transverse To Transverse (M)	Axial To Wall (M)	Axial To Axial (M)	
2.5	4.5	9.4	3.5	6	
4	4.5	10	3.5	6.5	
6	4.5	9.5	2.5	5.5	
Open Area (0.5 lux minimum) Spacing Table					
Mounting Height (M)	Transverse To Wall (M)	Transverse To Transverse (M)	Axial To Wall (M)	Axial To Axial (M)	
2.5	4	9	3.5	8	
4	5	10	4	9	
6	5	11.5	4	10	

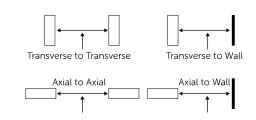



7W High Power Bulkhead (09094V2) Spacing Table						
	Escape Ro	oute (1 lux across ce	ntral line)			
Mounting Height (M)	Transverse To Wall (M)	Transverse To Transverse (M)	Axial To Wall (M)	Axial To Axial (M)		
4	7	16	7	16		
6	8	20	8	20		
8	8.5	22	8.5	22		
	Open Area (0.5 lux minimum) Spacing Table					
Mounting Height (M)	Transverse To Wall (M)	Transverse To Transverse (M)	Axial To Wall (M)	Axial To Axial (M)		
4	6.5	16.5	6.5	16.5		
6	7.5	18.5	7.5	18.5		
8	8.5	23.5	8.5	23.5		



Twin Spot Spacing Tables

12W Emergency Twin Spot (09088V2) Spacing Table					
	Escape Route (1 lux across central line)				
Mounting Height (M)	Transverse To Wall (M)	Transverse To Transverse (M)	Axial To Wall (M)	Axial To Axial (M)	
4	-	-	6.5	16	
6	-	-	7	18	
8	-	-	6.5	18.5	
Open Area (0.5 lux minimum) Spacing Table					
Mounting Height (M)	Transverse To Wall (M)	Transverse To Transverse (M)	Axial To Wall (M)	Axial To Axial (M)	
4	5	13	6.5	16	
6	5.5	15	7	17	
8	5.5	17	7.5	18	

